


(1) INSTALL OFFSET Hinges

(2) INSTALL ADA Door Closures

ON ALL DOORS MARKED IN GREEN

Provide 32" Clear opening.

MUST HAVE The required 12" Clear push width OR The required 18" Clear pull width

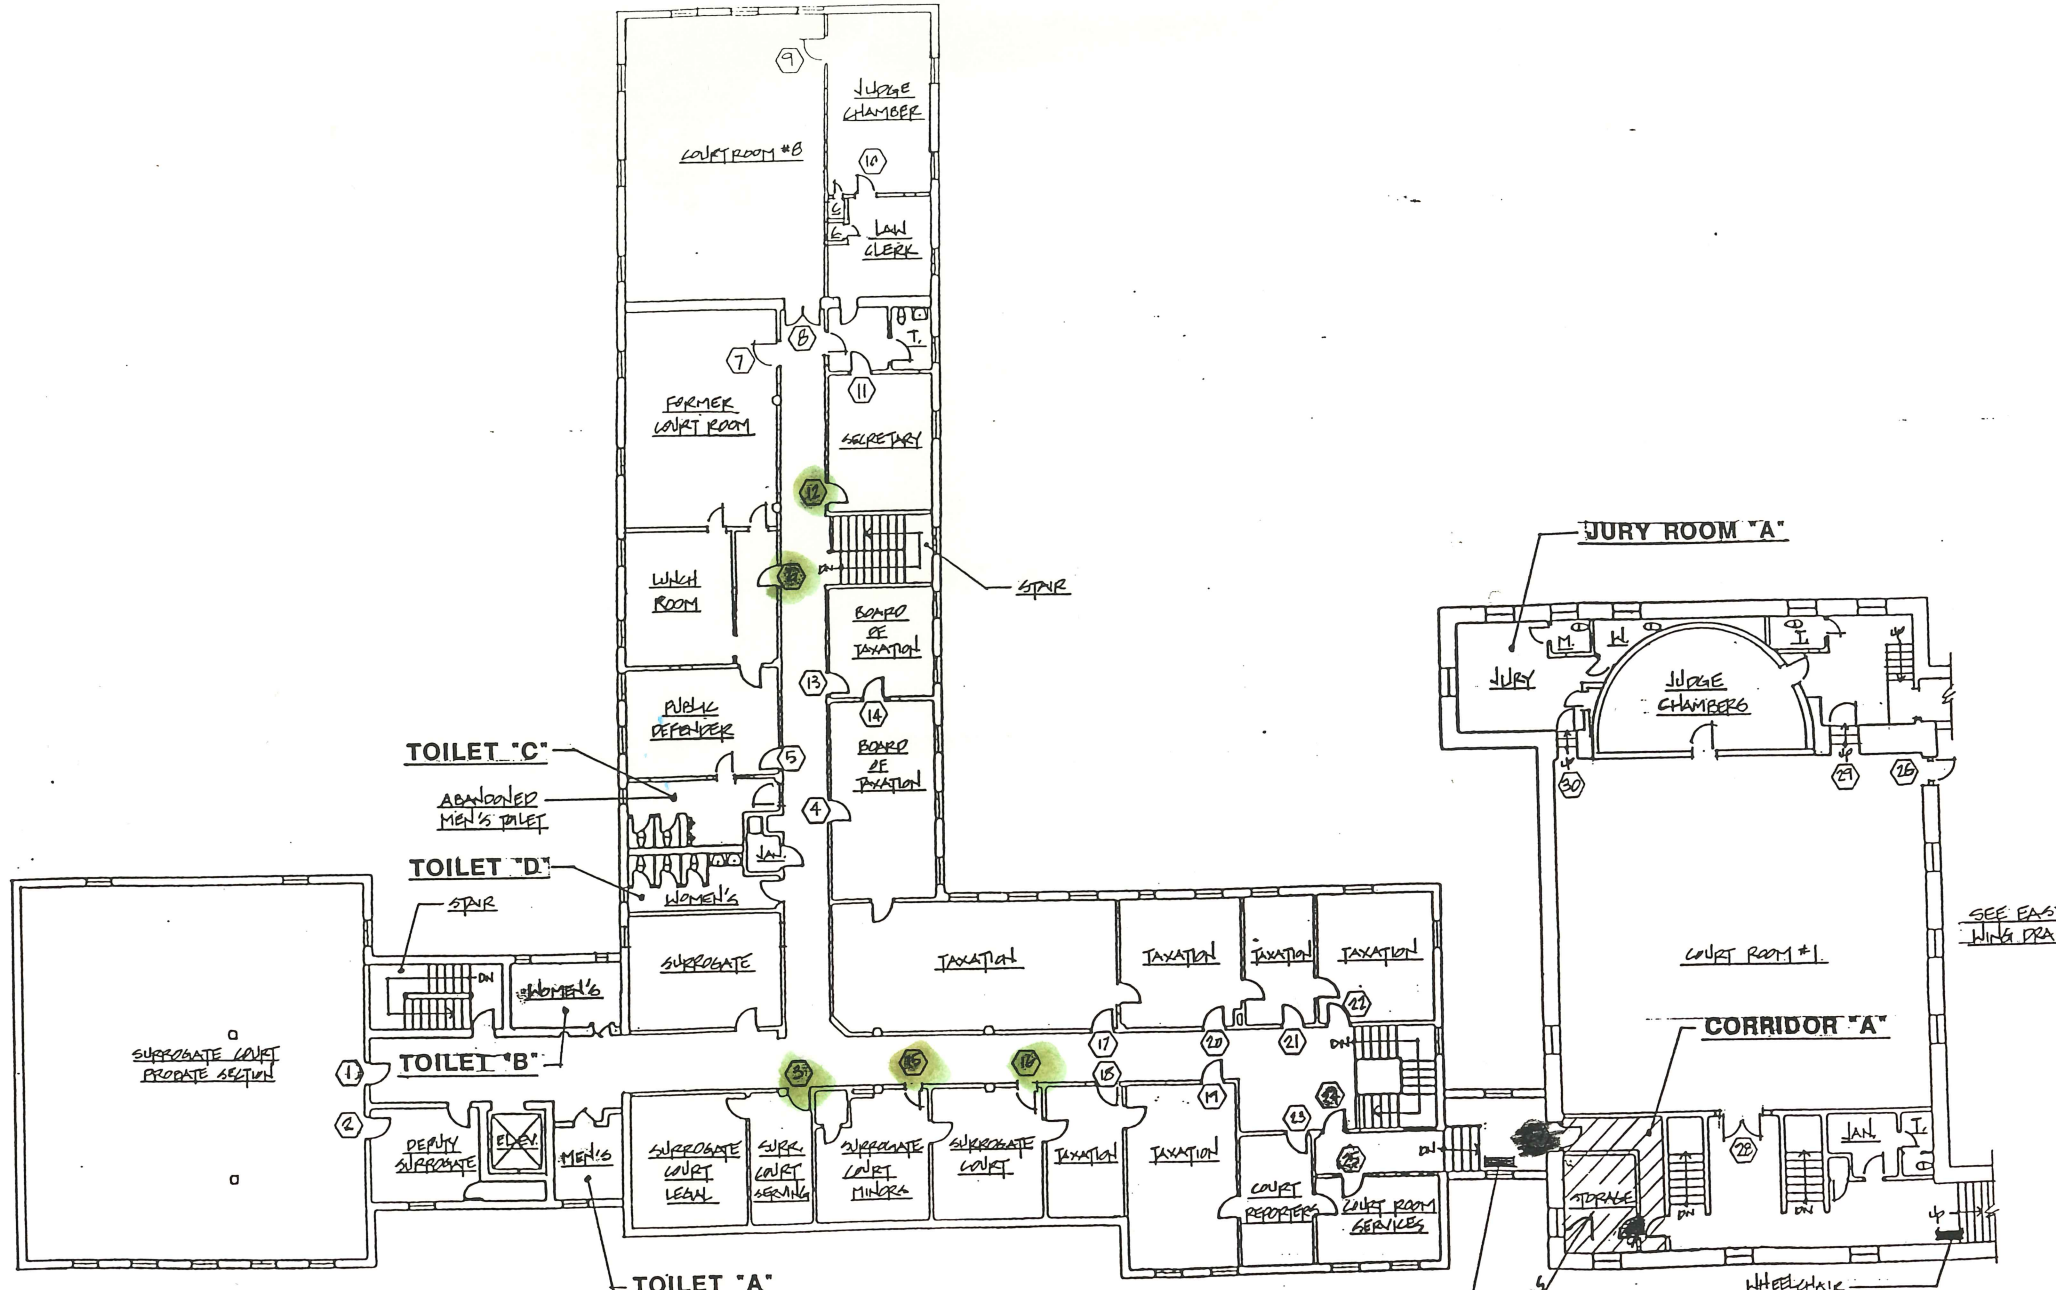

Ct House WEST WING - SECOND FLOOR PLAN Not To Scale